


## Water Tower Operator's Manual



### CONNECTING POWER:

**DCC:** Connect the red and black wires to track power.

**DC:** Connect the red and black wires to the AC Accessory output of your power pack (shown below.)  
The matching black wire pair should already be attached to the push button.

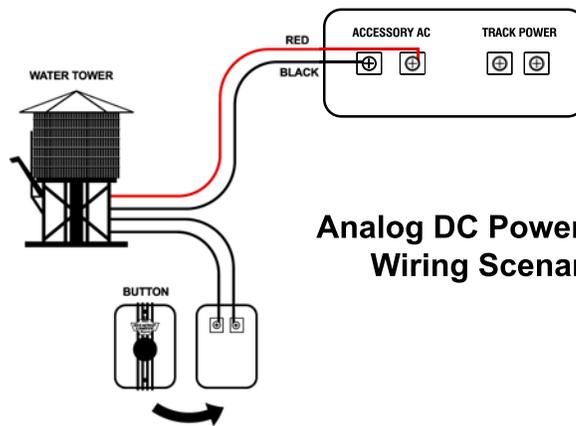

**Analog DC Power Pack  
Wiring Scenario**

### Operation:

Your water tower has a moving spout and synchronized sounds. Use the included push-button to activate the sound and motion sequences. You may extend the length of wires connected to the push-button as necessary. Press the button a single time to start the water fill sequence. Press the button a second time within five seconds, and the water fill sound will play indefinitely.

If you do not press the button a second time, after some time the water tower will play one of several unique messages simulating an overflow, followed by the shut-off and the spout returning to its initial position.

After the initial five second period, you can press the button again at any time to cut short the water fill and return the spout to its starting position.

### Warranty Information:

This model is warranted against defects in materials and workmanship for a period of one year from the date of purchase. In the event you require service, please contact Broadway Limited Imports via email: [service@broadway-limited.com](mailto:service@broadway-limited.com). For Telephone Service Inquiries, call (386) 673 - 8900. Proof of purchase will be required if purchased from a retailer other than Broadway Limited Imports, LLC.